
INSTRUCTIONS TO REPLACE CARDALE LOCK BARREL AZSP1215

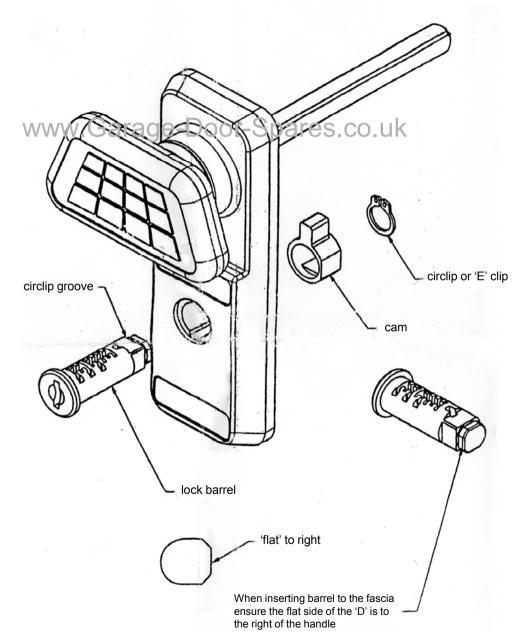

Tools Required: Pozidriv screwdriver, Flat blade screwdriver, Pliers

PROCEDURE

The complete lock body must be removed from the garage door before the lock barrel can be replaced.

Proceed as follows:

- 1. Note orientation of components. unscrew and remove the plastic internal latch lever and cam assembly.
- 2. Unscrew and remove the two pan head screws securing lock body to door.
- 3. Slide lock body out through front of door and retain parts for refitting.
- 4. On the inside of the lock body, locate the circlip on the rear of the lock barrel and remove carefully using pliers.
- 5. Remove cam and retain
- 6. Withdraw the old lock barrel from the outside of the lock body and discard
- 7. Ensure mechanism is in locked (upper) position
- 8. Insert the new lock barrel into the fascia (see note below)
- 9. From the inside of the lock body, place the cam over the end of lock barrel with projection pointing upwards and circlip groove visible, Fit circlip onto the end of new lock barrel using pliers, ensuring it locates fully into the groove
- 10. Check for correct operation of the lock assembly
- 11. Re-fit lock body assembly onto door using the saved screws etc.
- 12. Check the locking system operation and latch engagement

www.Garage-Door-Spares.co.uk